


Step Four:



Review Your Ballot

- After you have voted all the pages of the ballot, a Ballot Summary page appears. This allows you to review your selections. **No selection** means you did not vote in that contest.



Ballot Summary

Contest	Selected
President	George Washington
Vice-President	John Adams
Secretary	Thomas Jefferson
Clerk	Harry Truman
Board Member	Martin Luther King
Council Member	Betsy Ross
Council Member	Abraham Lincoln
Commissioner	Franklin Roosevelt
Treasurer	Francis Scott Key
Treasurer	Margaret Chase Smith
Assessor	No selections

- To vote or change your vote, turn  wheel until the contest you want to amend is highlighted, then press . You will return to that contest.

Then you make a selection.

- You may use the  and  buttons to review your ballot.


Step Five:

Cast Your Ballot

- When you are ready to cast your ballot, press



- Your vote has been recorded when you see the waving American Flag.

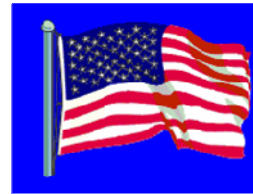

Important!

Press



to get help!

Recording the Major Events of Your Life



Turn the **SELECT** wheel to highlight your choices.

Press **ENTER** to vote for a selected choice.



Use **PREV** to go to the previous page. Use **NEXT** to go to the next page.

Press **HELP** to get help.



Use the **CAST BALLOT** button to cast your ballot.

STAN STANART

Harris County Clerk



INSTRUCTIONS FOR OPERATING THE E-SLATE ELECTRONIC VOTING MACHINE

www.cclerk.hctx.net

Step One:

Selection Your Language



1. Rotate the wheel until the language you want is highlighted in red.

English


Español

Tiếng Việt


2. Press  to make your selection.

Step Two:

Enter Your Access Code

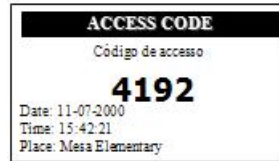

1. Turn the wheel to highlight the first number of your Access Code.

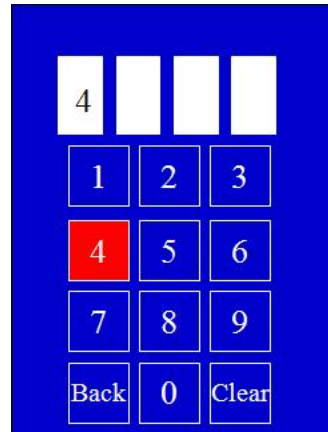

2. Press the button to choose that number.

3. Repeat for all numbers of your Access Code.

4. When the last digit in your code has been entered, you will see the first page of your ballot.

Step Three:

Make Ballot Choices



President
<input checked="" type="checkbox"/> Abraham Lincoln
<input type="checkbox"/> Alexander Hamilton
President
<input checked="" type="checkbox"/> Abraham Lincoln
<input type="checkbox"/> Alexander Hamilton

1. Turn the wheel until your choice is highlighted in blue.



2. Press the button. The box to the left of your choice will turn red to show your vote.

3. The blue highlight bar will move to the next contest title.
4. Continue through the ballot until you have voted all the contests you wish to vote.



5. You may use the buttons at any time to move through the ballot.

Changing your straight party choice may modify your previous selections.